CATERPILLAR

Operation and Maintenance Manual

422E BACKHOE LOADER

S/N HBE00001-UP

Tip; Use Bookmarks panel to navigate

Printed by Heavy Equipment Manuals
v2.20

Printed in U.S.A

Heavy Equipment Manuals

SEBU7970-16 416E, 422E and 428E Backhoe Loaders ——— 2
SEBU7971-03 AccuGrade® Site Reference System (SRS) and
Laser Reference System (LRS) ——— 521

Foreword 2
Maintenance Section 6
Operation Section 209
Product Information Section 403
Reference Information Section 447
Safety Section 456
Warranty Section 518

Product: BACKHOE LOADER
Model: 422E BACKHOE LOADER HBE
Configuration: 422E Backhoe Loader Single Tilt Side Shift Boom HBE00001-UP (MACHINE) POWERED BY 3054C Engine

Operation and Maintenance Manual
416E, 422E and 428E Backhoe Loaders

Media Number -SEBU7970-16 **Publication Date -01/02/2015** **Date Updated -08/04/2019**

s03548206

Foreword

California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

WARNING - This product can expose you to chemicals including ethylene glycol, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to:

www.P65Warnings.ca.gov

Do not ingest this chemical. Wash hands after handling to avoid incidental ingestion.

WARNING - This product can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information go to:

www.P65Warnings.ca.gov

Wash hands after handling components that may contain lead.

Literature Information

This manual should be stored in the operator's compartment in the literature holder or seat back literature storage area.

This manual contains safety information, operation instructions, transportation information, lubrication information, and maintenance information.

Some photographs or illustrations in this publication show details or attachments that can be different from your machine. Guards and covers might have been removed for illustrative purposes.

Continuing improvement and advancement of product design might have caused changes to your machine which are not included in this publication. Read, study, and keep this manual with the machine.

Whenever a question arises regarding your machine, or this publication, please consult your Cat dealer for the latest available information.

Safety

The safety section lists basic safety precautions. In addition, this section identifies the text and locations of warning signs and labels used on the machine.

Read and understand the basic precautions listed in the safety section before operating or performing lubrication, maintenance, and repair on this machine.

Operation

The operation section is a reference for the new operator and a refresher for the experienced operator. This section includes a discussion of gauges, switches, machine controls, attachment controls, transportation, and towing information.

Photographs and illustrations guide the operator through correct procedures of checking, starting, operating, and stopping the machine.

Operating techniques outlined in this publication are basic. Skill and techniques develop as the operator gains knowledge of the machine and its capabilities.

Maintenance

The maintenance section is a guide to equipment care. The Maintenance Interval Schedule (MIS) lists the items to be maintained at a specific service interval. Items without specific intervals are listed under the "When Required" service interval. The Maintenance Interval Schedule lists the page number for the step-by-step instructions required to accomplish the scheduled maintenance. Use the Maintenance Interval Schedule as an index or "one safe source" for all maintenance procedures.

Maintenance Intervals

Use the service hour meter to determine servicing intervals. Calendar intervals shown (daily, weekly, monthly, etc.) can be used instead of service hour meter intervals if the calendar intervals

provide more convenient servicing schedules and approximate the indicated service hour meter reading. Perform the recommended service at the interval that occurs first.

Under severe, dusty, or wet operating conditions, more frequent lubrication than is specified in the maintenance intervals chart might be necessary.

Perform service on items at multiples of the original requirement. For example, at every 500 service hours or 3 months, also service those items listed under every 250 service hours or monthly and every 10 service hours or daily.

Certified Engine Maintenance

Proper maintenance and repair are essential to keep the engine and machine systems operating correctly. As the heavy-duty off-road diesel engine owner, you are responsible for the performance of the required maintenance listed in the Owner Manual, Operation and Maintenance Manual, and Service Manual.

It is prohibited for any person engaged in the business of repairing, servicing, selling, leasing, or trading engines or machines to remove, alter, or to render inoperative, any emission-related device or element of design installed on or in an engine or machine that is in compliance with all applicable regulations of the intended country to which it has been shipped. Certain elements of the machine and engine such as the exhaust system, fuel system, electrical system, intake air system, and cooling system may be emission-related and should not be altered unless approved by Caterpillar.

Machine Capacity

Additional attachments or modifications may exceed machine design capacity which can adversely affect performance characteristics. Included would be stability and system certifications such as brakes, steering, and rollover protective structures (ROPS). Contact your Cat dealer for further information.

Product Identification Number

Effective First Quarter 2001 the Product Identification Number (PIN) has changed from 8 to 17 characters. To provide uniform equipment identification, construction equipment manufacturers are moving to comply with the latest version of the product identification numbering standard. Non-road machine PINs are defined by ISO 10261. The new PIN format will apply to all machines and generator sets. The PIN plates and frame marking will display the 17 character PIN. The new format will look like the following:

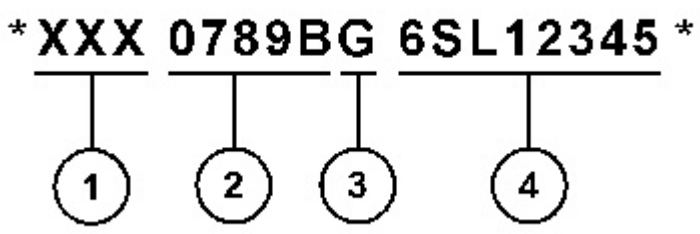

This is the sample of the manual

Click on the download link for complete manual

Download Link

Illustration 1 g03891925

Where:

1. World Manufacturing Code (characters 1-3)

2. Machine Descriptor (characters 4-8)

3. Check Character (character 9)

4. Machine Indicator Section (MIS) or Product Sequence Number (characters 10-17). These were previously referred to as the Serial Number.

Machines and generator sets produced before First Quarter 2001 will maintain their 8 character PIN format.

Components such as engines, transmissions, axles, and work tools will continue to use an 8 character Serial Number (S/N).

Copyright 1993 - 2023 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.
Tue Mar 7 16:23:01 UTC+0530 2023

Axle Breathers - CleanReplace 4
Backhoe Boom, Stick, Bucket, and Cylinder Bearings - Lubricate 6
Backup Alarm - Test 9
Battery - Recycle 10
Battery or Battery Cable - InspectReplace 11
Belts - InspectAdjustReplace 12
Brake Reservoir Oil Level - Check 15
Braking System - Test 17
Bucket Cutting Edges - InspectReplace 20
Bucket Tips - InspectReplace 22
Cab Filter (Fresh Air) - CleanInspectReplace 25
Cab Filter (Recirculation) - CleanInspectReplace 28
Cab Interior - Clean 30
Capacities (Refill) 31
Cooling System Coolant (ELC) - Change 33
Cooling System Coolant Level - Check 37
Cooling System Coolant Sample (Level 1) - Obtain 39
Cooling System Coolant Sample (Level 2) - Obtain 41
Cooling System Water Temperature Regulator - CleanReplace 43
Differential Oil (Front) - Change 45
Differential Oil (Rear) - Change 47
Differential Oil Level (Front) - Check 49
Differential Oil Level (Rear) - Check 50
Differential Oil Sample (Front) - Obtain 52
Differential Oil Sample (Rear) - Obtain 53
Drive Shaft Spline - Lubricate 54
Engine Air Filter Primary Element - Replace 56
Engine Air Filter Secondary Element - Replace 58
Engine Air Filter Service Indicator - Inspect 60
Engine Air Precleaner - Clean 62

Engine Compartment - Clean 64
Engine Crankcase Breather - Replace 65
Engine Oil and Filter - Change 68
Engine Oil Level - Check 71
Engine Oil Sample - Obtain 73
Engine Valve Lash - Check 74
Extendable Stick Pads - InspectAdjust - If Equipped 75
Film (Product Identification) - Clean 85
Final Drive Oil (Front) - Change 88
Final Drive Oil (Rear) - Change 90
Final Drive Oil Level (Front) - Check 93
Final Drive Oil Level (Rear) - Check 95
Final Drive Oil Sample (Front) - Obtain 97
Final Drive Oil Sample (Rear) - Obtain 98
Fuel System - Prime 99
Fuel System Filter and Water Separator - Replace 102
Fuel System Water Separator - Drain 105
Fuel Tank Water and Sediment - Drain 107
Fuses - Replace 109
Hydraulic Oil Sample - Obtain 113
Hydraulic System Oil - Change 115
Hydraulic System Oil Filter - Replace 119
Hydraulic System Oil Level - Check 122
Indicators and Gauges - Test 123
Lift Cylinder Brace - Connect and Disconnect 124
Loader Bucket, Cylinder, and Linkage Bearings - Lubricate 127
Lubricant Viscosities - Fluids Recommendations 132
Maintenance Interval Schedule 139
Oil Filter - Inspect 143
Parking Brake - CheckAdjust 145

Quick Coupler - Clean 148
Quick Coupler - Lubricate - Hydraulic Pin Grabber Quick Coupler (If Equipped) 150
Quick Coupler - Lubricate - If Equipped 152
Radiator Core - Clean 155
Receiver Dryer (Refrigerant) - Replace 157
Rollover Protective Structure (ROPS) - Inspect 159
S·O·S Information 161
Seat Belt - Inspect 162
Seat Belt - Replace 164
Sideshift Stabilizer Wear Pads - InspectAdjust 166
Stabilizer - CleanInspect 168
Swing Frame and Cylinder Bearings - Lubricate 170
System Pressure Release 172
Tire Inflation - Check 176
Tire Inflation Pressure Adjustment 177
Tire Inflation with Air 178
Tire Shipping Pressure 179
Transmission Magnetic Screen - Clean 182
Transmission Oil - Change 184
Transmission Oil Filter - Replace 187
Transmission Oil Level - Check 189
Transmission Oil Sample - Obtain 191
Welding on Machines and Engines with Electronic Controls 193
Wheel Bearings (Front) - Lubricate - Two-Wheel Drive 195
Wheel Nut Torque - Check 197
Window Washer Reservoir - Fill 199
Window Wipers - InspectReplace 201
Windows - Clean 202

Product: BACKHOE LOADER
Model: 422E BACKHOE LOADER HBE
Configuration: 422E Backhoe Loader Single Tilt Side Shift Boom HBE00001-UP (MACHINE) POWERED BY 3054C Engine

Operation and Maintenance Manual
416E, 422E and 428E Backhoe Loaders
Media Number -SEBU7970-16 **Publication Date -01/02/2015** **Date Updated -08/04/2019**

i02436158

Axle Breathers - Clean/Replace

SMCS - 3278-070-BRE; 3278-510-BRE

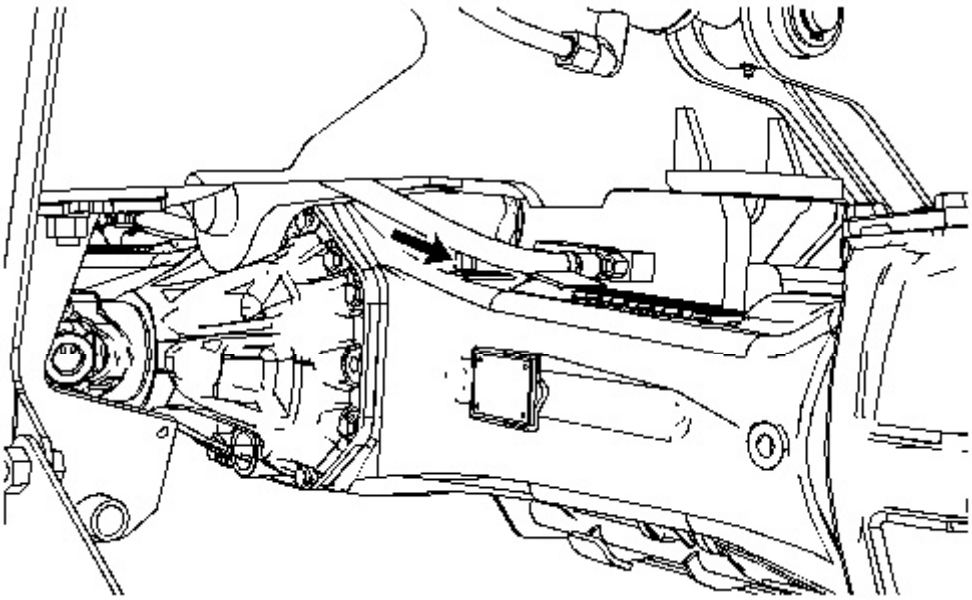

Illustration 1 g01216797

The front axle breather is located on the top right side of the differential housing.

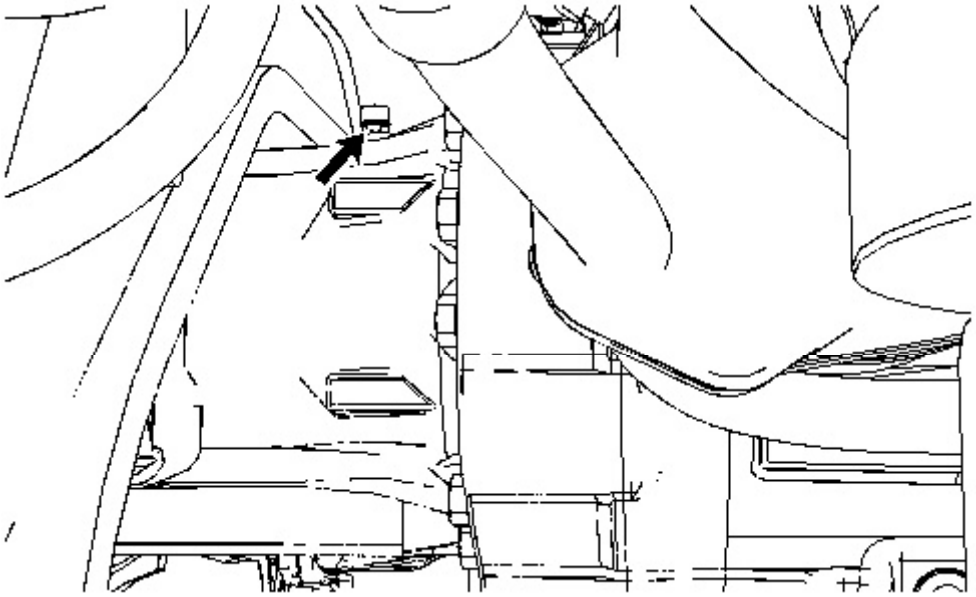

Illustration 2 g01216798

The rear axle breather is located to the left of the differential housing.

1. Clean the area around the breathers. Remove the breather from the front axle.
2. Wash the breather in clean nonflammable solvent. Wipe the breather dry and check the breather for damage.
3. Install the clean breather back into the axle. Replace the breather if the breather is damaged.

   Note: Make sure that the slot in the breather is parallel to the axle housing.

Copyright 1993 - 2023 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Product: BACKHOE LOADER
Model: 422E BACKHOE LOADER HBE
Configuration: 422E Backhoe Loader Single Tilt Side Shift Boom HBE00001-UP (MACHINE) POWERED BY 3054C Engine

Operation and Maintenance Manual
416E, 422E and 428E Backhoe Loaders
Media Number -SEBU7970-16 **Publication Date -01/02/2015** **Date Updated -08/04/2019**

i02968284

Backhoe Boom, Stick, Bucket, and Cylinder Bearings - Lubricate

SMCS - 6501-086-BD; 6502-086-BD; 6503-086-BD; 6511-086-BD; 6512-086-BD; 6533-086-BD; 7562-086-BD

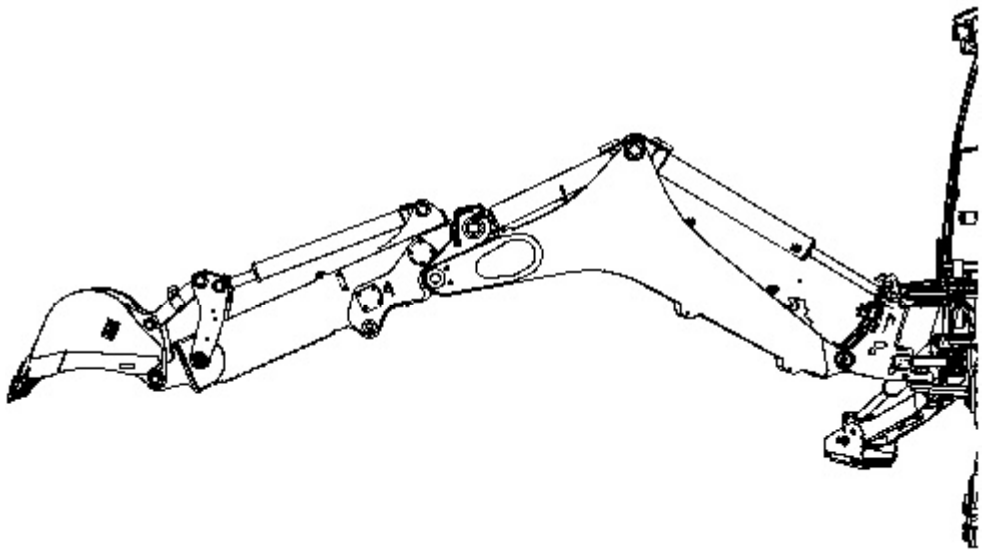

Illustration 1 g01194613

Position the backhoe into the service position that is shown above. Lower the bucket to the ground. Relieve the hydraulic pressure.

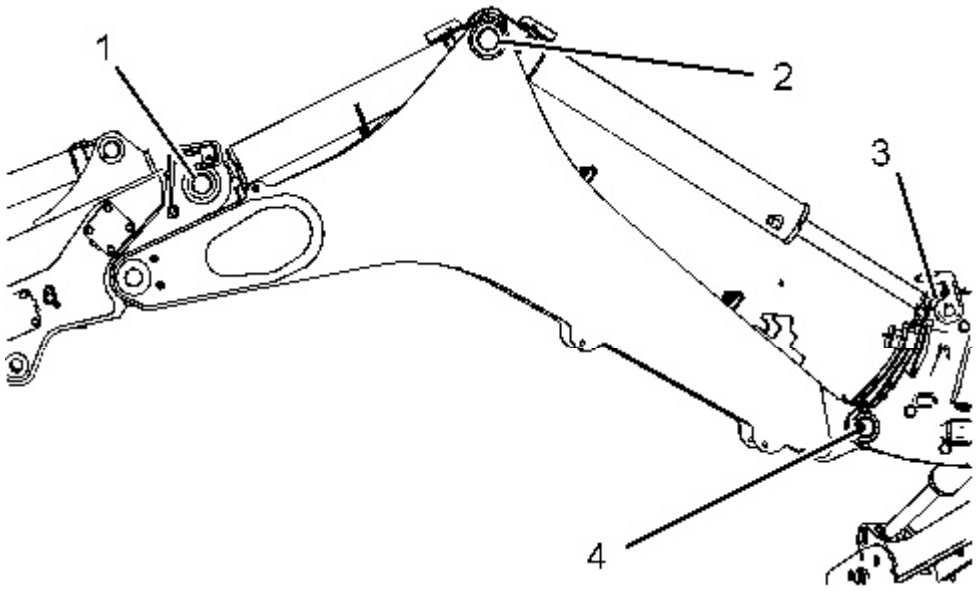

Illustration 2 g01194615

Apply lubricant to the grease fitting (1) for the rod end of the stick cylinder.

Apply lubricant to the grease fitting (2) for the head end of the boom cylinder and the head end of the stick cylinder.

Apply lubricant to the grease fitting (3) for the rod end of the boom cylinder.

Apply lubricant to the grease fitting (4) for the boom pivot. There is one grease fitting on each side of the machine.

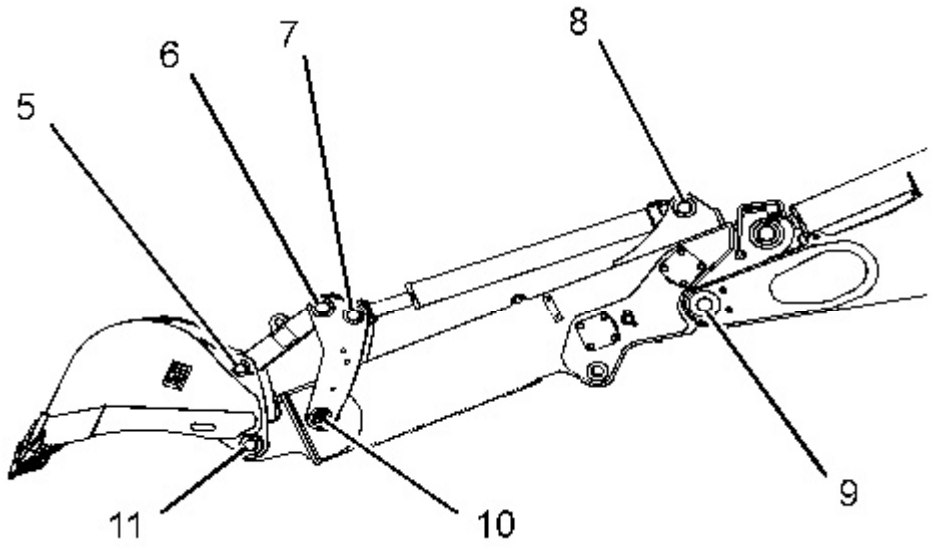

Illustration 3 g01194617

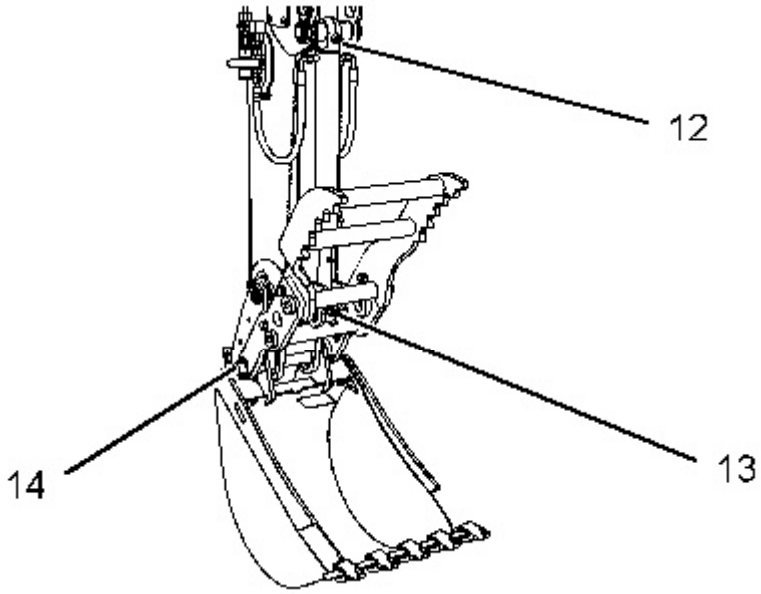

Illustration 4 g01491621

Apply lubricant to the grease fitting (5) for the bucket pivot pin.

Apply lubricant to the grease fitting (6) for the link.

Apply lubricant to the grease fitting (7) for the rod end of the bucket cylinder.

Apply lubricant to the grease fitting (8) for the head end of the bucket cylinder.

Apply lubricant to the grease fitting (9) for the pivot pin for the stick.

Apply lubricant to the grease fitting (10) for the pivot pin. There is one grease fitting on each side of the machine.

Apply lubricant to the grease fitting (11) for the pivot pin.

Apply lubricant to the grease fitting (12) for the head end of the thumb cylinder.

Apply lubricant to the grease fitting (13) for the rod end of the thumb cylinder.

Apply lubricant to the grease fitting (14) for the pivot pin on each side of the thumb.

There is a total of 21 grease fittings.

Copyright 1993 - 2023 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.
Tue Mar 7 16:27:54 UTC+0530 2023

Product: BACKHOE LOADER
Model: 422E BACKHOE LOADER HBE
Configuration: 422E Backhoe Loader Single Tilt Side Shift Boom HBE00001-UP (MACHINE) POWERED BY 3054C Engine

Operation and Maintenance Manual
416E, 422E and 428E Backhoe Loaders
Media Number -SEBU7970-16 **Publication Date -01/02/2015** **Date Updated -08/04/2019**

i00080741

Backup Alarm - Test

SMCS - 7406

Turn the engine start switch key to ON in order to perform the test.

Apply the service brake. Move the transmission direction control lever to REVERSE position.

The backup alarm should immediately sound. The backup alarm will continue to sound until the transmission direction control lever is moved to the NEUTRAL position or to the FORWARD position.

Copyright 1993 - 2023 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Product: BACKHOE LOADER
Model: 422E BACKHOE LOADER HBE
Configuration: 422E Backhoe Loader Single Tilt Side Shift Boom HBE00001-UP (MACHINE) POWERED BY 3054C Engine

Operation and Maintenance Manual
416E, 422E and 428E Backhoe Loaders
Media Number -SEBU7970-16 **Publication Date -01/02/2015** **Date Updated -08/04/2019**

i07746330

Battery - Recycle

SMCS - 1401-561

Always recycle a battery. Never discard a battery.

Always return used batteries to one of the following locations:

- A battery supplier
- An authorized battery collection facility
- Recycling facility

Copyright 1993 - 2023 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Product: BACKHOE LOADER
Model: 422E BACKHOE LOADER HBE
Configuration: 422E Backhoe Loader Single Tilt Side Shift Boom HBE00001-UP (MACHINE) POWERED BY 3054C Engine

Operation and Maintenance Manual
416E, 422E and 428E Backhoe Loaders
Media Number -SEBU7970-16 **Publication Date -01/02/2015** **Date Updated -08/04/2019**

i01833495

Battery or Battery Cable - Inspect/Replace

SMCS - 1401

1. Turn the engine start switch to the OFF position. Turn all switches to the OFF position.
2. Disconnect the negative battery cable from the frame.

   Note: Do not allow the disconnected battery cable to contact the frame of the machine.
3. Disconnect the negative battery cable at the battery.
4. Inspect the battery terminals and inspect the battery cables. Keep the terminals clean and keep the terminals coated with petroleum jelly.
5. Perform the necessary repairs. Replace the cable or the battery, as needed.
6. Connect the negative battery cable at the battery.
7. Connect the battery cable to the frame of the machine.
8. Install the engine start switch key.

Copyright 1993 - 2023 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.
Tue Mar 7 16:28:39 UTC+0530 2023

Product: BACKHOE LOADER
Model: 422E BACKHOE LOADER HBE
Configuration: 422E Backhoe Loader Single Tilt Side Shift Boom HBE00001-UP (MACHINE) POWERED BY 3054C Engine

Operation and Maintenance Manual
416E, 422E and 428E Backhoe Loaders
Media Number -SEBU7970-16 **Publication Date -01/02/2015** **Date Updated -08/04/2019**

i03316203

Belts - Inspect/Adjust/Replace

SMCS - 1357-040; 1357-510; 1357-025

If new belts are installed, check belt adjustment after 30 minutes of operation. For multiple belt drive applications, always replace the belts in matched sets. Replacing only one belt of a matched set will cause the new belt to carry more load because the older belts are stretched. The additional load on the new belt could cause the new belt to break.

1. Install the lift cylinder brace. Refer to Operation and Maintenance Manual, "Lift Cylinder Brace - Connect and Disconnect" for more information.

2. Remove the engine access panel on the left side of the machine.

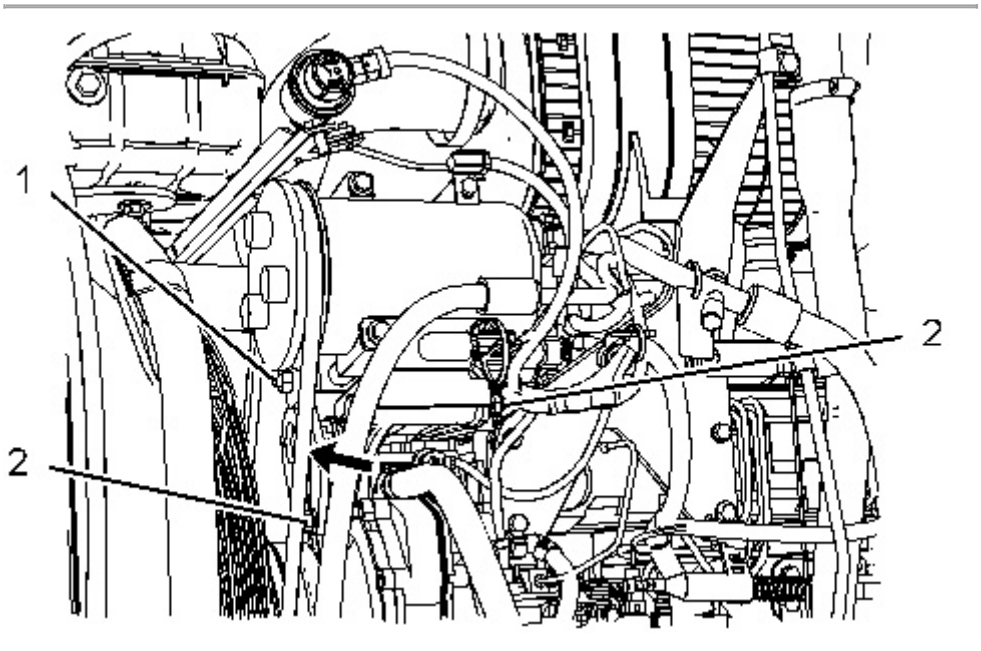

Illustration 1 g01178773

3. Inspect the condition of the air conditioner belt and the adjustment of the air conditioner belt. The air conditioner belt should deflect 10 mm (0.38 inch) under 110 N (25 lb) of force.
4. Loosen the adjusting locknut (1) . Loosen the two compressor bracket mounting bolts (2) .
5. Move the compressor until the correct belt tension is reached.
6. Tighten the adjusting locknut (1) . Tighten the two compressor bracket mounting bolts (2) .
7. Recheck the belt deflection. If the amount of deflection is incorrect, repeat Step 4 to Step 6.
8. Install the engine access panel.
9. Remove the engine access panel on the right side of the machine.

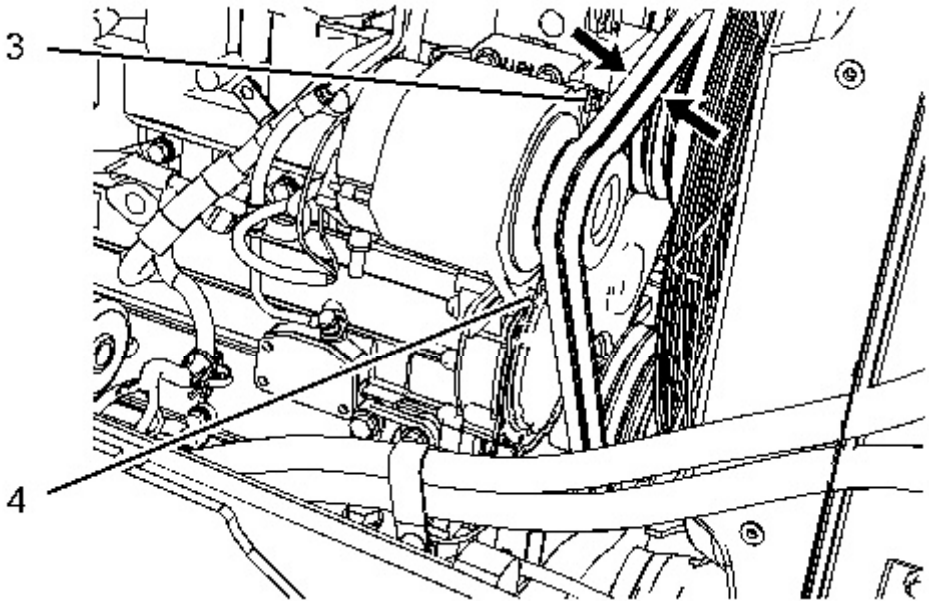

Illustration 2 g01178833

10. Inspect the condition of the alternator belts and the adjustment of the alternator belts. The alternator belts should deflect 10 mm (0.38 inch) under 110 N (25 lb) of force.
11. Loosen the mounting bolt (3) . Loosen the adjusting locknut (4) .
12. Move the alternator until the correct tension is reached.
13. Tighten the adjusting locknut (4) . Tighten the mounting bolt (3) .
14. Recheck the belt deflection. If the amount of deflection is incorrect, repeat Step 11 to Step 13.
15. Install the engine access panel.
16. Start the engine. Raise the loader arms to the maximum height.

17. Remove the pin and replace the brace for the loader lift arm to the stored position on the loader lift arm.

18. Lower the bucket to the ground.

Copyright 1993 - 2023 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Product: BACKHOE LOADER
Model: 422E BACKHOE LOADER HBE
Configuration: 422E Backhoe Loader Single Tilt Side Shift Boom HBE00001-UP (MACHINE) POWERED BY 3054C Engine

Operation and Maintenance Manual
416E, 422E and 428E Backhoe Loaders
Media Number -SEBU7970-16 **Publication Date -01/02/2015** **Date Updated -08/04/2019**

i03565009

Brake Reservoir Oil Level - Check

SMCS - 4291-535

Open the engine access door on the top of the machine.

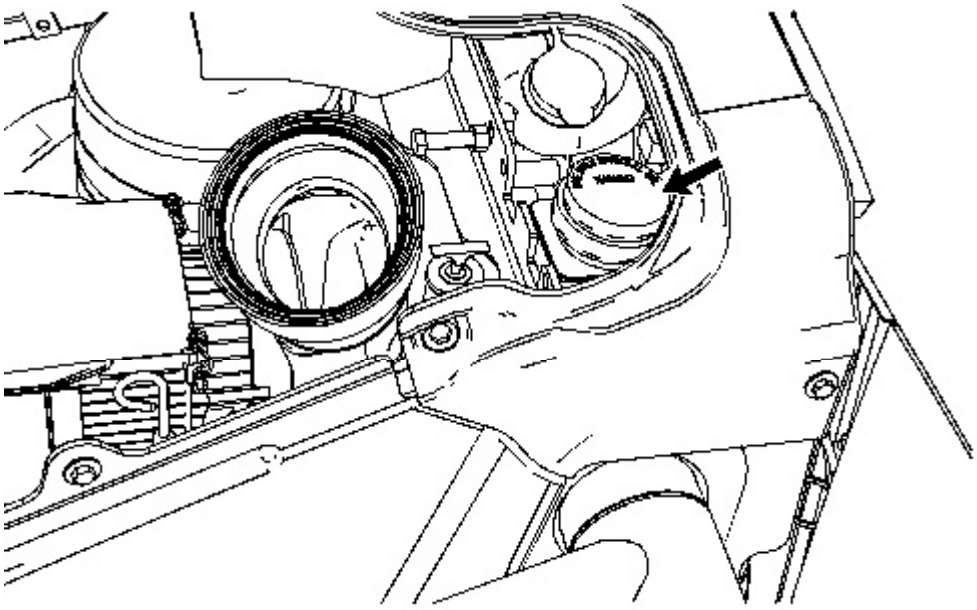

Illustration 1 g01203566

WARNING

The use of a pressure washer on the engine compartment can force water into the brake reservoir. Water that enters the brake reservoir

can result in a reduced braking ability. A reduced braking ability could result in personal injury or death. Do not use a pressure washer to wash the brake reservoir.

Maintain the oil level between the "MIN" mark and "MAX" mark on the brake reservoir. Add oil, if necessary.

Note: Ensure that the filler cap is clean before removing the cap from the reservoir.

Note: Do not clean the area near the brake reservoir with high pressure water. If water entered the reservoir contact your local Caterpillar dealer.

Copyright 1993 - 2023 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Product: BACKHOE LOADER
Model: 422E BACKHOE LOADER HBE
Configuration: 422E Backhoe Loader Single Tilt Side Shift Boom HBE00001-UP (MACHINE) POWERED BY 3054C Engine

Operation and Maintenance Manual
416E, 422E and 428E Backhoe Loaders
Media Number -SEBU7970-16 **Publication Date -01/02/2015** **Date Updated -08/04/2019**

i04002955

Braking System - Test

SMCS - 4251; 4267; 7000

S/N - HBE1-UP

S/N - SNL1-UP

Service Brake Holding Ability Test

Check the area around the machine. Make sure that the machine is clear of personnel and clear of obstacles.

Test the brakes on a dry, level surface.

Fasten the seat belt before you test the brakes.

The following tests are used to determine if the service brake is functional. These tests are not intended to measure the maximum brake holding effort. The brake holding effort that is required to sustain a machine at a specific engine rpm varies depending on the machine. The variations are the differences in the engine setting, in the power train efficiency, and in the brake holding ability, etc.

1. Start the engine. Raise the bucket slightly.
2. Apply the service brake. Release the parking brake.
3. Move the transmission control lever to THIRD SPEED FORWARD.
4. Gradually increase the engine speed to high idle. The machine should not move.

WARNING

If the machine begins to move, reduce the engine speed immediately and engage the parking brake.

5. Reduce the engine speed to low idle. Move the transmission to NEUTRAL. Engage the parking brake. Lower the bucket to the ground. Stop the engine.

NOTICE

If the machine moved while testing the brakes, contact your Caterpillar dealer. Have the dealer inspect and, if necessary, repair the service brake before returning the machine to operation.

Secondary Brake Holding Ability Test

Check the area around the machine. Make sure that the machine is clear of personnel and clear of obstacles.

Test the brakes on a dry, level surface.

Fasten the seat belt before you test the brakes.

The following tests are used to determine if the parking brake is functional. These tests are not intended to measure the maximum brake holding effort. The brake holding effort that is required to sustain a machine at a specific engine rpm varies depending on the machine. The variations are the differences in the engine setting, in the power train efficiency, and in the brake holding ability, etc.

1. Start the engine. Raise the bucket slightly.
2. Engage the parking brake.
3. Move the transmission control lever to THIRD SPEED FORWARD, then to NEUTRAL, then back to THIRD SPEED FORWARD.

   Note: The parking brake indicator light should come on and the parking brake alarm should sound.
4. Gradually increase the engine speed to high idle. The machine should not move.

WARNING

If the machine begins to move, reduce the engine speed immediately and apply the service brake pedal.

5. Reduce the engine speed. Move the transmission to NEUTRAL. Lower the bucket to the ground. Stop the engine.

NOTICE

If the machine moved while testing the brakes, contact your Caterpillar dealer.

Have the dealer inspect and, if necessary, repair the parking brakes before returning the machine to operation.

Copyright 1993 - 2023 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Product: BACKHOE LOADER
Model: 422E BACKHOE LOADER HBE
Configuration: 422E Backhoe Loader Single Tilt Side Shift Boom HBE00001-UP (MACHINE) POWERED BY 3054C Engine

Operation and Maintenance Manual
416E, 422E and 428E Backhoe Loaders
Media Number -SEBU7970-16 **Publication Date -01/02/2015** **Date Updated -08/04/2019**

i01920076

Bucket Cutting Edges - Inspect/Replace

SMCS - 6801

WARNING

Personal injury or death can result from bucket falling.

Block the bucket before changing bucket cutting edges.

1. Raise the bucket. Place a block under the bucket.
2. Lower the bucket to the blocking.

   Do not block up the bucket too high. Block up the bucket so that the bucket is high enough to remove the cutting edges and the end bits.
3. Remove the bolts. Remove the cutting edge and the end bits.
4. Clean the contact surfaces.
5. Use the opposite side of the cutting edge, if this side is not worn.
6. Install a new cutting edge, if both edges are worn.
7. Install the bolts. Tighten the bolts to the specified torque.
8. Raise the bucket. Remove the blocks.
9. Lower the bucket to the ground.
10. After a few hours of operation, check the bolts for proper torque.

Copyright 1993 - 2023 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Tue Mar 7 16:29:47 UTC+0530 2023

Product: BACKHOE LOADER
Model: 422E BACKHOE LOADER HBE
Configuration: 422E Backhoe Loader Single Tilt Side Shift Boom HBE00001-UP (MACHINE) POWERED BY 3054C Engine

Operation and Maintenance Manual
416E, 422E and 428E Backhoe Loaders
Media Number -SEBU7970-16 **Publication Date -01/02/2015** **Date Updated -08/04/2019**

i02540747

Bucket Tips - Inspect/Replace

SMCS - 6805

WARNING

Personal injury or death can result from the bucket falling.

Block the bucket before changing bucket tips.

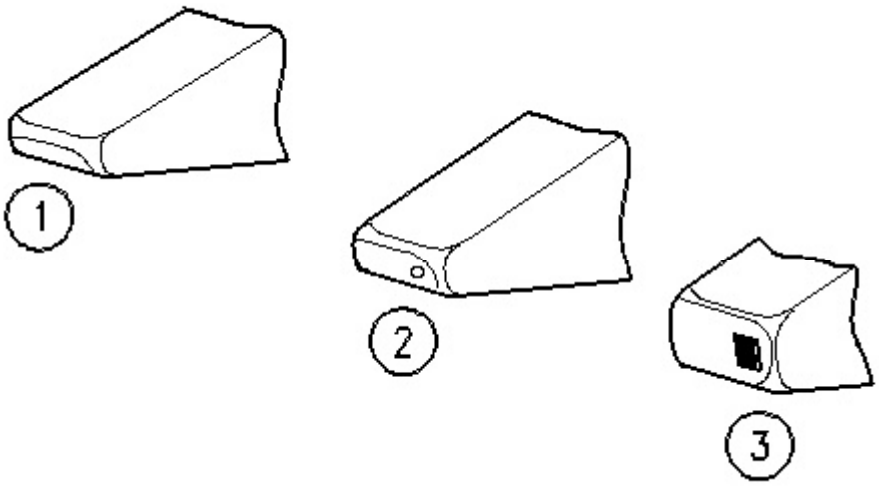

Illustration 1 g00101352

(1) This tip is usable. (2) This tip should be replaced. (3) This tip has been overworn.

Check the bucket tips for wear. If the bucket tip has a hole, replace the bucket tip.

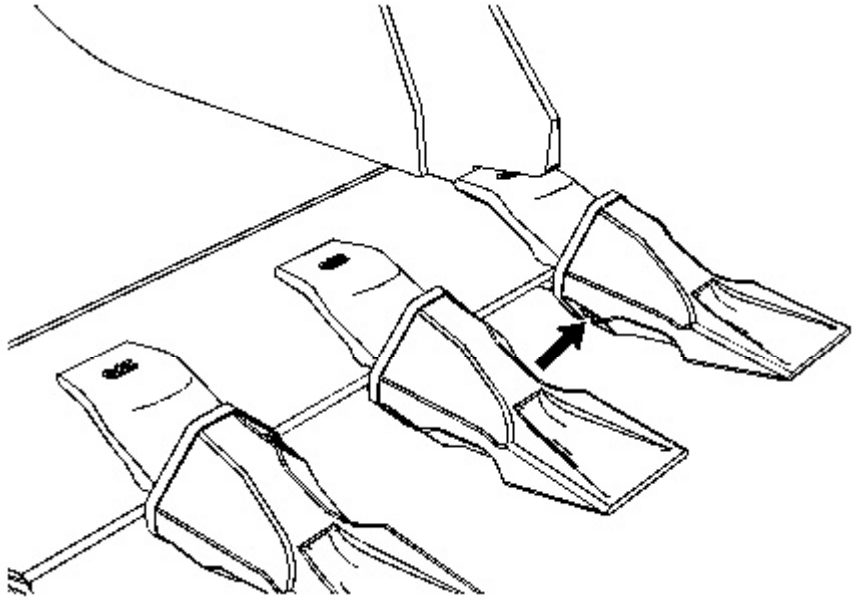

Illustration 2 g01272671

1. Drive the pin out of the bucket tip from the retainer side of the bucket tip. Remove the bucket tip and the retainer.

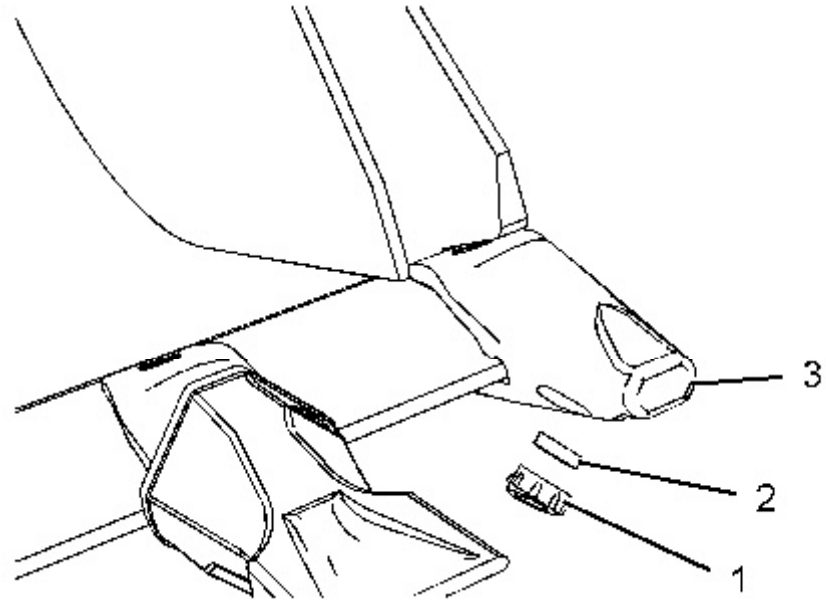

Illustration 3 g01272854

(1) Retaining washer
(2) Retainer
(3) Adapter

2. Clean the adapter and the pin.
3. Fit retainer (2) into retaining washer (1). Install this assembly into the groove that is in the side of adapter (3).

This is the sample of the manual

Click on the download link for complete manual

Download Link